

Turning on your instrument

- Press and hold POWER/ENTER button. Release it when the instrument beeps.
- When warm-up sequence is completed, the normal operating screen is displayed.

Note: If a failure occurs, press and release the RESET button. The failed channel's gas reading will be replaced by "- - -". Replace the failed sensor as soon as possible.

- If Cal Reminder or Bump Reminder are set to on and a calibration or a bump test is due, see operator's manual for warm-up sequence.


Performing a fresh air adjustment

- Press and hold the AIR button in a fresh air environment. The LCD displays "HOLD AIR KEY".
- Release the AIR button when the LCD prompts you to.
- The instrument will set the fresh air reading for all channels.




Normal operating mode

- The gas concentration is displayed.
- Battery charge level is indicated in upper left corner.
- The heart symbol displayed in the upper left corner flashes while the instrument is functioning properly.
- Fan symbol in upper right corner spins while pump is on.

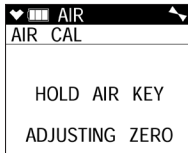


Turning the instrument off

- Press and hold the POWER/ENTER button for approximately five seconds to turn off the unit.

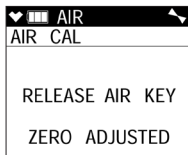

GX-6000 Quick Reference Card

6 Gas with PID, IR, and Super Toxics

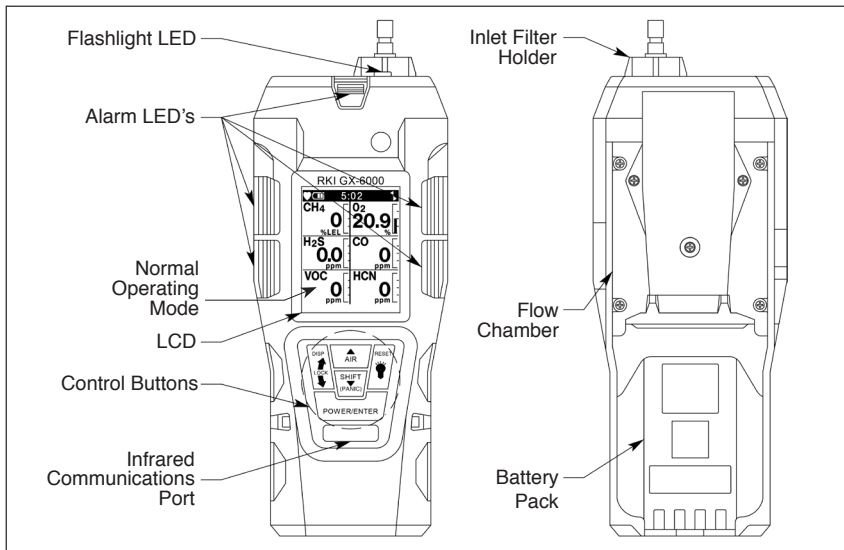

World Leader in Gas Detection and Sensor Technology